

# User Manual

---

Kitchen scales up to 5kg

**wagPRO-K5**

# Table of contents

- Specifications: ..... 3
- Kit contents:..... 4
- Features: ..... 4
- Key Description:..... 4
- Usage and available features: ..... 5
- Notes: ..... 6

## Specifications:

- **Warranty:** 1 year
- **Material:** steel, ABS
- **Maximum load:** 5 kg
- **Measurement accuracy:** 1 g
- **Display:** LCD 5-digit display, backlit in blue
- **Additional features:** screen pause, scale tare, units change, automatic shutdown, low battery and pan overload indication
- **Available weighing units:** kg, lb, oz, kg, ml, milk
- **Power supply:** 2 x 1.5V/AAA battery
- **Dimensions of the device:** 17,5 x 14 x 1,5 cm
- **Package dimensions:** 20 x 16 x 3 cm
- **Weight of the device:** 230 g
- **Weight with packaging:** 290 g

## Kit contents:

- wagPRO-K5,
- 2 x 1.5V/AAA battery,
- User manual

## Features:

- **Maximum load:** 5 kg
- **Measurement accuracy:** 1 g
- **Display:** LCD, up to five numbers, backlit in blue
- **Power supply:** 2 x 1.5V/AAA battery
- **Additional features:** screen pause, scale tare, units change, automatic shutdown, low battery and pan overload indication

## Key Description:

- **ON/OFF:** power button
- **UNITS:** function key for quantity calculation

## Usage and available features:

### **1. Operation**

- Place the charging plate (if any) on the body of the scale.
- Press the ON button to turn the scale on.
- No objects can be placed or weighed before the display is zeroed.

### **2. Manual shutdown**

Press the ON/OFF button to use the shutdown function.

### **3. Unit conversion**

This product is designed with two units (metric system and British system), which can be mutually converted by pressing the UNIT button at the bottom.

### **4. Overload message**

The appearance of this message during weighing means that the current load exceeds the maximum weight of the product. Immediately remove the item to avoid damage to the scale housing.

### **5. Power supply**

This product has an environmentally friendly design with very low power consumption. The battery pack is installed at the factory. After purchase, remove the insulated thin layer of the battery. When the low voltage message appears, replace the battery.

## **6. Low voltage message**

When the battery is discharged, a left prompt will appear in the upper left corner of the display, replace the battery immediately.

### Notes:

1. Do not put the product in water or clean it with caustic chemicals.
2. When any part of the scale housing becomes dirty with oil, spicy ingredients, vinegar or other stimulants, clean it immediately.
3. When weighing, place the scale on a hard, flat surface. When using the scale, do not place it on carpet or soft material.